


## HANGING THE SHADING

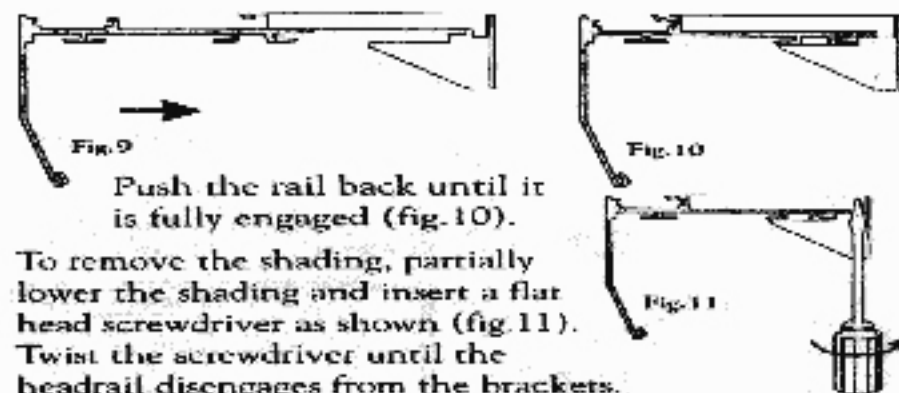

Push the rail back until it is fully engaged (fig. 10).

To remove the shading, partially lower the shading and insert a flat head screwdriver as shown (fig. 11). Twist the screwdriver until the headrail disengages from the brackets.

## CHILD SAFETY

The Consumer Product Safety Commission requires the use of a cord tie down (cord tensioner) on all continuous loop cord systems. The use of such a device is intended to significantly reduce the occurrence of infant or small child strangulation injuries or deaths resulting from the looped pull cords on various window treatment products.

The Cord Tensioner is installed on the Lift Cord before packaging.

The Tensioning device should be mounted in the proper position to pull the cord taut in order to reduce the possibility of injury.

## CORD TENSIONER INSTALLATION


Lower the shading

Hold the tension device upright as shown in the illustration.

Position the tension device on the window frame of the wall so that the tension device and the control cord do not interfere with shade operation.

The control cord must be taut but still operable. Do not allow for any slack. Do not twist or cross the control cord.

Holding the tension device upright, taut and in position, insert and secure screw.

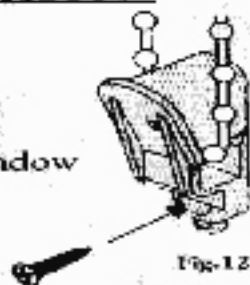

## OPERATION

Pulling down on the back cord will lower the shading. When the window shading is completely lowered, pulling down on the back cord will open the vanes. Continued pulling in this direction will raise the fabric with the vanes in the open position. The window shading must only be raised a maximum of 24" in this manner to avoid damaging the fabric. There is a stop pre-set on the head chain to allow 24" of reverse roll-up (fig. 13).




Pulling down on the front cord will close the vanes and then raise the shading.

## HOLD DOWN INSTALLATION

Use the pin on the hold down bracket to punch out the front hole on the bottom rail end cap.

Mount the hold down to the side of back of the window frame so that the pin lines up with the front hole in the bottom rail end cap with the shade fully lowered and fully open.

Lower the shading and flex the hold down bracket outward so that the pin can be inserted into the hole in the end cap.

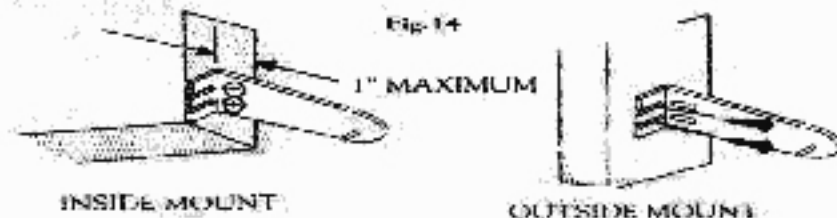

## CLEANING AND CARE

The soft and delicate feel of Sheer Horizontal Window Shadings belies the durability of the material. Sheer Horizontal is created from sturdy, knitted polyester fabric and may be feather dusted or vacuumed at a low suction setting. Spots or stains can be rubbed clean with a damp sponge and mild soap. To avoid discoloration of the material, we recommend against the use of chemical cleaners. If necessary the shading may be professionally ultrasonically cleaned.

All knitted fabrics experience weave variations due to heat, humidity and other room conditions. These variations can result in slight bowing, puckering and dimpling of the Sheer Horizontal material. The possible variations are minor and have been shown through case study not to detract from the beauty of this product.